



Wine Cooler
INSTRUCTION MANUAL

WWC29

IMPORTANT SAFETY INSTRUCTIONS

⚡ WARNING ⚡	To reduce the risk of fire, electrical shock, or injury when using your Wine/Beverage Cooler, follow these basic precautions:
<ul style="list-style-type: none">• Read all instructions before using the Wine/Beverage Cooler.• DANGER or WARNING: Risk of child entrapment.• Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous . . . even if they will “just sit in the garage a few days”.• Before you throw away your old Wine/Beverage Cooler: take off the doors. Leave the shelves in place so that children may not easily climb inside.• Never allow children to operate, play with, or crawl inside the Wine/Beverage Cooler.• Never clean Wine/Beverage Cooler parts with flammable fluids. The fumes can create a fire hazard or explosion.• Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.• Do not use extension cords. <p style="text-align: center;">-Save these instructions-</p>	

INSTALLATION INSTRUCTIONS

➤ Before Using Your Wine/Beverage Cooler

- Remove the exterior and interior packing.
- Check to be sure you have all of the following parts:
 - 5 Shelves
 - 1 Bottle/Can Basket
 - 1 Instruction Manual
- Before connecting the Wine/Beverage Cooler to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.

➤ Installation of Your Wine/Beverage Cooler

- This appliance is designed to be free standing only, and should not be recessed or built-in (fully recessed).
- Place your Wine/Beverage Cooler on a floor that is strong enough to support it when it is fully loaded. To level your Wine/Beverage Cooler, adjust the adjustable leg at the bottom of the unit.
- Allow 5 inches (127 mm) of space between the back and sides of the unit, which allows the proper air circulation to cool the compressor.
- Locate the Wine/Beverage Cooler away from direct sunlight and sources of heat (stove,

heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.

- Avoid locating the unit in moist areas.
- Plug the Wine/Beverage Cooler into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Avanti Products service center.
- After plugging the appliance into a wall outlet, allow the unit to cool down for 2-3 hours before placing items in the compartment.

➤ **Electrical Connection**

⚡ Warning ⚡

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized Products service center.

This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.

Your wine cooler requires a grounded outlet. It is not recommended that the ground be bypassed to allow the unit to be plugged into a two-prong outlet. Use 3 pin plug only. Your wine cooler power rating is 115 Volts. 60HZ.

Plug the appliance into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Products service center.

The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury.

Do not use an adapter plug with this appliance.

Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

➤ **Reversing the Door Swing of Your Appliance**




This appliance has the capability of the door opening from either the left or right side. The unit is delivered to you with the door opening from the left side. Should you desire to reverse the opening direction, please call service for reversal instructions.


OPERATING YOUR WINE/BEVERAGE COOLER

➤ **Setting the Temperature Control**

Display panel







- You can set the temperature as you desire by pushing the button  or  (the temperature preset at the factory is 50°F(10°C)
- The temperature that you desire to set will increase 1°F if you push the  once,

on the contrary the temperature will decrease 1°F (-17°C) if you push the  once.




- Temperature display panel
SPARKL: 45-47° F (7-8° C)
WHITE: 48-54° F (9-12° C)
RED: 55-65° F (13-18° C)



-  power button

I  lock/unlock key, 1min later keyboard will be locked not including  key), there is 2 short ding voice when locked press  for one second to unlock there is one second long voice when unlocked

NOTE: WHEN USING FOR BOTH WINE AND BEER SIMULTANEOUSLY WE RECOMMEND THAT YOU PLACE RED WINE BOTTLES ON TOP SHELF AND BEER ON BOTTOM SHELF.

➤ Interior Light

You can turn the interior light on or off by pushing the button .

Keep pushing the  and  button for 3 seconds, it can realize the transformation of unit “° F” and “° C”



ATTENTION!

- I Firstly the temperature is set 50°F (10°C) default, when restart will be at beginning default.
- I In order to extend the compressor life, please restart wine cooler after 3 minutes later.

I Malfunction indication

- Sensor problem, show E1;
- Self inspection mistake, show E3;
- Communication problem, show E4;
- Too cold in cabinet, show L;

In this condition, buzzer will be humming for one second every 30 second

- I When put in many wine, the temperature in cabinet will rise temporarily



WARNING!

You should touch the temperature control panel softly as the panel is touch screen control. Please protect the touch control panel carefully to avoid scrape, far away from strong magnetic field and high humidity, or it will cause wine cooler can not work well

CARE AND MAINTENANCE

➤ **Cleaning Your Wine/Beverage Cooler**

- Unplug the Wine/Beverage Cooler, and remove all items including shelves and rack.
- Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the shelves and rack with a mild detergent solution.
- The outside of the Wine/Beverage Cooler should be cleaned with mild detergent and warm water.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

➤ **Power Failure**

- Most power failures are corrected within a few hours and should not affect the temperature of your Wine/Beverage Cooler if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

➤ **Vacation Time**

- **Short vacations:** Leave the Wine/Beverage Cooler operating during vacations of less than three weeks.
- **Long vacations:** If the appliance will not be used for several months, remove all items and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

➤ **Moving Your Wine/Beverage Cooler**

- Remove all items.
- Securely tape down all loose items (shelves and basket) inside your Wine/Beverage Cooler.
- Turn the adjustable foot up to the base to avoid damage.
- Tape the door shut.
- Be sure the Wine/Beverage Cooler stays secure in the upright position during transportation. Also protect outside of Wine/Beverage Cooler with a blanket, or similar item.

➤ **Energy Saving Tips**

- The Wine/Beverage Cooler should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.

PROBLEMS WITH YOUR WINE/BEVERAGE COOLER?

You can solve many common Wine/Beverage Cooler problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Wine/Beverage Cooler does not operate.	Not plugged in. The circuit breaker tripped or a blown fuse.
Wine/Beverage Cooler is not cold enough.	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly. The Wine/Beverage Cooler does not have the correct clearances.
Turns on and off frequently.	The room temperature is hotter than normal. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The Wine/Beverage Cooler does not have the correct clearances.
Vibrations.	Check to assure that the Wine/Beverage Cooler is level.
The Wine/Beverage Cooler seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your Wine/Beverage Cooler. Contraction and expansion of the inside walls may cause popping and crackling noises. The Wine/Beverage Cooler is not level.
The door will not close properly.	The Wine/Beverage Cooler is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.